

Instructions on Loading Firmware:

1. Install v3.45 or higher of the SIXNET I/O Tool Kit.
2. Read the Firmware version loaded on the EtherTRAK-2 module.
3. Connect to EtherTRAK-2 via Ethernet. Ethernet firmware load is recommended (must have boot loader 1.03 or higher). Must use USB to update firmware if boot loader is 1.02 or lower.
4. Open the Tool Kit and highlight the EtherTRAK-2 in the project file.
5. Go to Operations-->Advanced Operations-->Upgrade Firmware.
6. In the Load Firmware window select the *.zip file using the "...” button. Click the OK button.

Important Note: When upgrading bootloader from version 1.01 to 1.03. Please make sure the first part of the firmware load (boot loader upgrade) is not interrupted. Don't disconnect power or the USB cable. Load firmware using the zip file. Do not attempt to load the files individually.
